

clarion®

Owner's manual

EZD580

■ Navigation software

Copyright note

The product and the information contained herein is subject to change without prior notification.

This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of Clarion Co., Ltd.

© 2008 - Clarion Co., Ltd.

Data Source © 2006 Tele Atlas N.V.

Austria: © BEV, GZ 1368/2003

Denmark: © DAV

France: © IGN France

Great Britain: Ordnance Survey data with permission of Her Majesty's Stationery Office © Crown Copyright

Italy: © Geonext/DeAgostini

Northern Ireland: © Ordnance Survey of Northern Ireland

Ireland:

Norway: © Norwegian Mapping Authority, Public Roads Administration / Mapsolutions

Switzerland: © Swisstopo

The

Netherlands:

Topografische ondergrond

Copyright © dienst voor het kadaster en de openbare registers, Apeldorn

All rights reserved.

Thank you for choosing Clarion EZ Drive as your door-to-door in-car navigator. Read the Quick Reference Guide first and start using Clarion EZ Drive right away. This document is the detailed description of the software. You can easily discover Clarion EZ Drive while you are using it; however, we still recommend that you read this manual to understand the screens and the features of Clarion EZ Drive.

Table of contents

1 Warnings and Safety information	7
2 Getting started with Clarion EZ Drive	8
2.1 Simple and Advanced modes	9
2.2 Hardware buttons	11
2.3 Buttons and other controls on the screen	11
2.3.1 Using keyboards	12
2.4 Using the map	13
2.4.1 Checking the details of a map location	13
2.4.2 Manipulating the map	13
2.4.3 Status information and hidden controls on the map	15
2.4.4 Using the Cursor (the selected map location)	18
2.5 Clarion EZ Drive concepts	19
2.5.1 Smart Zoom	19
2.5.2 Position markers	19
2.5.2.1 Current GPS position and Lock-on-Road	19
2.5.2.2 Returning to GPS position	20
2.5.2.3 Selected location (Cursor)	20
2.5.2.4 Original position in the Cursor menu	20
2.5.3 Daytime and night color schemes	21
2.5.4 Color scheme in tunnels	21
2.5.5 Route calculation and recalculation	21
2.5.6 Itinerary	22
2.5.7 Track Logs	23
2.5.8 Route demonstration	23
2.5.9 POI (Points of Interest)	23
2.5.10 Road Safety Cameras	24
2.5.10.1 Camera types	24
2.5.10.2 Camera directions	25
2.5.11 Speed limit warning	25
2.5.12 TMC (Traffic Message Channel)	25
3 Navigating with Clarion EZ Drive	27
3.1 Selecting the destination of a simple route	27
3.1.1 Selecting the Cursor as the destination	27
3.1.2 Entering an address or part of an address	28
3.1.2.1 Entering an address	28
3.1.2.2 Selecting an intersection as the destination	29
3.1.2.3 Selecting a city center as the destination	30
3.1.2.4 Entering an address with a ZIP code	31
3.1.2.5 Tips on entering addresses quickly	32

3.1.3 Selecting the destination from your Favorites.....	32
3.1.4 Selecting the destination from the POIs.....	33
3.1.5 Selecting the destination from the History	34
3.1.6 Selecting the destination by entering its coordinate	34
3.2 <i>Creating a multi-point route</i>	35
3.3 <i>Watching the simulation of a route</i>	35
3.4 <i>Enabling Safety Mode</i>	36
3.5 <i>Pausing the active route</i>	36
3.6 <i>Deleting the active route</i>	36
3.7 <i>Using Track Logs</i>	37
3.8 <i>Saving a route</i>	38
3.9 <i>Loading a saved route</i>	38
4 Reference book (Advanced mode)	39
4.1 <i>Map screen</i>	39
4.1.1 Icons on the map	41
4.1.1.1 <i>Battery, GPS position quality and Vehicle type indicator</i>	42
4.1.1.2 <i>Status indicator strip</i>	43
4.1.1.3 <i>Next two route events (Turn Preview fields)</i>	43
4.1.2 Objects on the map.....	44
4.1.2.1 <i>Streets and roads</i>	44
4.1.2.3 <i>Elements of the active route</i>	44
4.1.3 Cursor menu.....	45
4.1.4 Position menu	47
4.1.5 Trip Information screen	47
4.1.5.1 <i>Trip Computer screen</i>	49
4.1.6 Cockpit menu	49
4.1.7 GPS data screen	50
4.2 <i>Find menu</i>	51
4.3 <i>Route menu</i>	52
4.4 <i>Manage menu</i>	53
4.4.1 Manage Saved Routes.....	53
4.4.2 Manage History.....	53
4.4.3 Manage Track Logs	54
4.4.4 Manage Favorites.....	55
4.4.5 Manage POIs.....	55
4.4.6 Manage Saved Search Criteria.....	56
4.4.7 User Data Management.....	57
4.5 <i>Settings menu</i>	57
4.5.1 Map Screen settings	58
4.5.2 Sound settings	59
4.5.3 Route Planning options	59

4.5.4 Regional settings	61
4.5.5 Navigation settings.....	62
4.5.6 Warning settings	63
4.5.7 GPS settings	63
4.5.8 TMC settings.....	64
4.5.9 Menu settings.....	65
4.5.10 Device settings	66
4.5.11 Track Log settings.....	66
5 Glossary.....	67
6 End User Licence Agreement.....	69

1 Warnings and Safety information

Clarion EZ Drive is a navigation system that helps you find your way to your destination with its built-in GPS receiver. Clarion EZ Drive does not transmit your GPS position; others cannot track you.

It is important that you look at the display only when it is safe to do so. If you are the driver of the vehicle, we recommend that you operate Clarion EZ Drive before you start your journey. Plan the route before your departure and stop if you need to change something in the route.

Clarion EZ Drive has a Safety Mode: if you turn on Safety Mode, you cannot change anything in Clarion EZ Drive while the vehicle is moving at a speed of 10 km/h (6 mph) or higher. Unless only passengers operate Clarion EZ Drive, we strongly encourage you to turn on Safety Mode.

You have to obey the traffic signs and follow the road geometry. If you deviate from the route that Clarion EZ Drive recommended, Clarion EZ Drive changes the instructions accordingly.









Never place Clarion EZD580 where it obstructs the driver's view, where it is in the deployment zone of an airbag or where it might cause injuries in an accident.

For more information, consult the End User Licence Agreement (page 69).

2 Getting started with Clarion EZ Drive

Clarion EZ Drive is optimized for in-car use. You can use it easily by tapping the screen buttons and the map with your fingertips or with the included retractable stylus.

Clarion EZ Drive can plan routes throughout the whole installed map set; you do not need to change maps or switch to a poorly detailed general map to navigate between map segments or countries.

Tasks	Instructions
Using the retractable stylus	You do not need a stylus to use Clarion EZ Drive. Tap the buttons and the map with your fingertips.
Double tapping the screen	You do not need to tap the screen twice for any action. With buttons and controls, a single tap is enough.
Tapping and holding the screen	<p>You do not need this to access the basic navigation functions. Tap and keep pressing the following buttons to reach extra functions:</p> <ul style="list-style-type: none"> Tap and hold  on the Map screen: you can set the minimum and maximum zoom level of Smart Zoom. Tap and hold any of the  buttons on the Map screen: you can set or reset the zoom value of the button (2D map). Tap and hold any of the  buttons on the Map screen: you can set or reset the tilt and zoom values of the button (3D map). Tap and hold  on list and menu screens: the Navigation menu appears. Tap and hold any of the  buttons on the Map screen: you can rotate, tilt or scale the map continuously. Tap and hold  on keyboard screens: you can delete several characters quickly. Tap and hold  or  in long lists: you can turn the page continuously.
Gestures (drag&drop)	<p>You do not need gestures to access the basic navigation features. You need to drag and drop the screen only in cases like:</p> <ul style="list-style-type: none"> Moving the handle on a slider. Moving the map: grab the map, and move it in the desired direction. Shortcut to return to the Map screen: slide your finger from the bottom right corner to the bottom left corner on any screen. Shortcut to open the Navigation menu: slide your finger from the top left corner to the bottom left corner on any screen.

Start using Clarion EZ Drive

When Clarion EZ Drive is started the first time, you need to do the following:

1. Select the written language of the application. Later you can change it in Settings (page 61).
2. Select the language and speaker used for voice guidance messages. Later you can change it in Settings (page 61).
3. Select whether to start the program in Simple mode or in Advanced mode. Later you can switch between the two operating modes in Settings.

After this, the Navigation menu appears and you can start using Clarion EZ Drive.

The Navigation menu in Simple mode:



The Navigation menu in Advanced mode:



The typical way of using Clarion EZ Drive is to select a destination, and start navigating. You can select your destination in the following ways (not all of them are available in Simple mode):

- Use the selected location on the map (the Cursor) (page 27).
- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 28).
- Enter an address with ZIP code (page 31). This way you do not need to select the name of the city and the search for street names might be faster as well.
- Use a coordinate (page 34)
- Use a saved location:
 - a Favorite (page 32)
 - a POI (page 33)
 - the History of previously set destinations and waypoints (page 34)

2.1 Simple and Advanced modes

The two operating modes of Clarion EZ Drive mainly differ in the menu structure and the number of available features. The controls and screen layouts are the same.

- Simple mode: you have easy access to the most important navigation functions and the basic settings only. The rest of the settings are set to values that are optimal for typical use.

- Advanced mode: you have access to the full functionality of Clarion EZ Drive.

To switch from Simple mode to Advanced mode: on the startup screen (Navigation Menu), tap



To switch from Advanced mode to Simple mode: on the startup screen (Navigation Menu), tap



The features and settings available in each mode are as follows:

Type of action	Available in Simple mode	Available in Advanced mode	Explanation
Navigating to a selected map point	Yes	Yes	See page 27
Navigating to a street address	Yes	Yes	See page 28
Navigating to an incomplete address	Yes	Yes	See page 28
Navigating to an intersection	Yes	Yes	See page 29
Navigating to recent destinations (History)	Yes	Yes	See page 34
Navigating to Favorites	Yes	Yes	See page 32
Navigating to a POI	Yes	Yes	See page 33
Navigating to coordinates	No	Yes	See page 34
Creating a multi-point route	No	Yes	See page 35
Saving a map point as a Favorite destination	Yes	Yes	See page 45
Saving a map point as a POI	No	Yes	See page 45
Saving a map point as a location of a Road Safety Camera	No	Yes	See page 45
Mark a map point with a Pin	No	Yes	See page 45
Saving the active route	No	Yes	See page 38
Saving Track Logs	No	Yes	See page 23
Map Screen settings	No	Yes	See page 58
Menu settings	Only background picture	Yes	See page 65
Sound settings	Only Master volume	Yes	See page 59
Route Planning options	Yes	Yes	See page 59
Regional settings	Only language	Yes	See page

Type of action	Available in Simple mode	Available in Advanced mode	Explanation
	selection		61
Warnings	No	Yes	See page 63

2.2 Hardware buttons

You can use Clarion EZ Drive mostly by tapping the touch screen. The device has multiple hardware buttons, the Power on/off button, volume up and down, navigation start, and sleep mode button.







You can turn Clarion ESD580 on or off at any time. When Clarion ESD580 is switched off, Clarion EZ Drive does not calculate your GPS position and it does not update the route or the driving instructions.



When you turn ESD580 on again, Clarion EZ Drive continues navigating as soon as the GPS receiver has determined your position.

2.3 Buttons and other controls on the screen

When you are using Clarion EZ Drive, you usually tap buttons on the touch screen.







You only need to confirm selections or changes in Clarion EZ Drive if the application needs to restart, it needs to perform a major reconfiguration, or you are about to lose some of your data or settings. Otherwise, Clarion EZ Drive saves your selections and applies the new settings without confirmation as soon as you use the controls.

Type	Example	Description	How to use it
Button		Tap it to initiate a function, to open a new screen, or to set a parameter.	Tap it once.
Icon		Shows status information.	Some icons also function as a button. Tap them once.
List		When you need to select from several options, they appear in a list.	Turn the page with the  and  buttons and tap the value that you want.
Slider		When a feature has several different unnamed values, Clarion EZ Drive shows an indicator on a gauge that displays and sets a value from a range.	<ul style="list-style-type: none"> • Drag the handle to move the slider to its new position. • Tap the slider where you want the handle to

Type	Example	Description	How to use it
			appear; the thumb jumps there.
Switch		When there are only two choices, a checkmark shows whether the feature is enabled.	Tap it to turn the switch on or off.
Virtual keyboard		Alphabetic and alphanumeric keyboards to enter text and numbers.	Each key is a touch screen button.


2.3.1 Using keyboards

You only need to enter letters or numbers in Clarion EZ Drive when you cannot avoid it. You can type with your fingertips on the full-screen keyboards and you can switch between various keyboard layouts, for example ABC, QWERTY, or numerical.

Task	Details
Switching to another keyboard layout, for example from a Latin QWERTY keyboard to a Greek keyboard	<p>Tap , and select from the list of available keyboard types.</p> <p>Clarion EZ Drive remembers your last keyboard choice and offers it the next time you need to enter data.</p>
Correcting your entry on the keyboard	<p>Remove the unneeded character(s): tap .</p> <p>Tap and hold the button to delete the entire input string.</p>
Entering a space, for example between a first name and a family name or in multi-word street names	Tap  .
Entering small or capital letters	Tap  to cycle through entering lower case letters, capital initials or all capitals.
Entering symbols	Tap  to switch to a keyboard of symbol characters.
Finalizing the keyboard entry	Tap  .

2.4 Using the map




 


The map screen is the most frequently used screen of Clarion EZ Drive. It can be accessed from the

Navigation menu by tapping .




For further information about the map screen, see page 39.


2.4.1 Checking the details of a map location

- If you are interested in the details of your current position during navigation:
 1. Check the bottom line of the map. It shows the current street and house number information.
 2. For further details, tap  to open the Position menu.
 3. Tap . The address, the coordinate and the list of nearby POIs will be displayed.
- You can check the details of any other location by selecting it on the map:
 1. Tap the map anywhere to open the map control buttons.
 2. Tap the desired location on the map. The Cursor () appears there. The address of the location is displayed at the bottom of the map.
 3. For further details, tap  to open the Cursor menu.
 4. Tap . The address, the coordinate and the list of nearby POIs will be displayed.
- It is even easier if you select the desired point in the Find menu. Then the Cursor menu opens automatically. You need to tap the  button only.










 
 

2.4.2 Manipulating the map






Position markers on the map:

- Current GPS position:  (page 19)

- Selected location (Cursor):  (page 20)

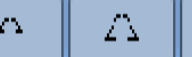


The following controls help you modify the map view to best suit your actual needs. Most of these controls appear only if you tap the map once, and disappear after a few seconds of inactivity.





Action	Button(s)	Description
Moving the map with drag&drop	No buttons	<p>You can move the map into any direction: tap and hold the map, and move your finger to the direction in which you want to move the map.</p> <p>If GPS position is available and you have moved the map, the  button appears. Tap this button to return to the GPS position.</p>
Opening/closing map control buttons		<p>Tap this button to show or hide the following map control buttons:</p> <ul style="list-style-type: none"> Zoom in/out Rotate left/right (3D map only) Tilt up/down (3D map only) Zoom preset buttons (2D map only) Tilt and zoom preset buttons (3D map only) Smart Zoom button
Zooming in and out	 	<p>Changes how much of the map is displayed on the screen.</p> <p>Clarion EZ Drive uses high-quality vector maps that let you see the map at various zoom levels, always with optimized content. It always displays street names and other text with the same font size, never upside-down, and you only see the streets and objects that you need.</p> <p>Map scaling has different limits in 2D and in 3D map view modes.</p>
Tilting up and down	 	Changes the vertical view angle of the map in 3D mode.
Rotating left and right	 	<p>Changes the horizontal view angle of the map in 3D mode.</p> <p>When GPS position is available, Clarion EZ Drive always rotates the map so its top faces your direction of travel (Track-Up orientation). You can turn away from Track-Up with these buttons.</p>
Viewing modes	 	<p>Gives you the following map perspectives in Clarion EZ Drive:</p> <ul style="list-style-type: none"> classic top-down view (2D) perspective view (3D) <p>The value always shows the mode the button switches to: If you are in 2D mode, you can see the  button and you need to tap it to switch to 3D mode.</p>
Smart Zoom		<p>Clarion EZ Drive can automatically rotate, scale and tilt the map and give you the optimal view:</p> <ul style="list-style-type: none"> When you are approaching a turn, Clarion EZ Drive zooms

Action	Button(s)	Description
		<p>in and raises the view angle to let you easily recognize your maneuver at the next junction.</p> <ul style="list-style-type: none"> If the next turn is at a distance, Clarion EZ Drive zooms out and lowers the view angle to show you the road in front of you. <p><u>Tap this button once</u> to enable Smart Zoom.</p> <p><u>Tap&hold the button</u> to set the zoom limits of Smart Zoom.</p>
Returning to the GPS position		Tap this button to move the map back to the current GPS position.
Zoom preset buttons		<p><u>Tap one of the preset buttons</u> to set the zoom level to a fix, predefined value. Smart Zoom is disabled. These buttons are available in 2D mode.</p> <p><u>Tap&hold any of the buttons</u> to set its value to the current zoom level, or to reset it to its original value.</p>
Tilt and zoom preset buttons		<p><u>Tap one of the preset buttons</u> to set the tilt and zoom levels to fix, predefined values. Smart Zoom is disabled. These buttons are available in 3D mode.</p> <p><u>Tap&hold any of the buttons</u> to set its value to the current tilt and zoom levels, or to reset it to its original value.</p>
Map scale		Clarion EZ Drive shows the scale of the map in 2D mode.
Fit-to-screen		<p>This button does not appear on the Map screen. It is available on the following screens:</p> <ul style="list-style-type: none"> Plan on Map screen: When you have an active route, you can display it in its full length on the map. Track Information screen: A track log can be displayed in its full length on the map.







2.4.3 Status information and hidden controls on the map






The following information appears in the rounded field in the top left corner, the Turn Preview field. When tapping this area, the result depends on the information currently shown.

Icon	Information	Details	Action
	There is no active route in Simple mode	If there is no route to be navigated in Simple mode, this icon appears in the Turn Preview field.	Tap this area to open Find Address.
	There is no active route in Advanced mode	If there is no route to be navigated in Advanced mode, this icon appears in the Turn Preview field.	Tap this area to open Find.
	There is no valid GPS	If an active route exists, and there is no valid GPS	Tap this area to open the Route Information screen.

Icon	Information	Details	Action
	position.	position, the view of the sky above you is shown with colored dots for each satellite. Some dots need to turn green to be able to navigate.	
	If the icon is a static picture, route calculation is needed	GPS position and an active route are available, but automatic off-route recalculation is switched off, and you deviated from the route.	Tap this area to make Clarion EZ Drive recalculate the recommended route.
	If the icon is animated, route calculation is in progress	Clarion EZ Drive is calculating or recalculating the route.	Nothing happens if you tap this area of the screen.
	Next route event (next maneuver)	GPS position and an active route are available, and you navigate the recommended route. This area gives you information about the type and distance of the next route event.	Tap this area to open the Route Information screen.





The following area appears next to the above described rounded area. When tapping this area, the result depends on the information currently shown.

Icon	Information	Details	Action
	No GPS signals detected	If there is no valid GPS position, this symbol appears here.	Tap this area to open the GPS Data screen to check the signal status or the connection settings.
	Traffic restriction	When GPS position is available, but there is no route to be navigated, the traffic restriction of the upcoming intersection is shown here if there is any.	Nothing happens if you tap this area of the screen.
	Second route event (maneuver after the next maneuver)	When GPS position and an active route are both available, this field shows the route event that follows the next route event shown in the above described area.	Tap this area to open the Itinerary screen with the turn by turn guidance instructions.
	Approaching a Road Safety Camera	This icon appears when you are approaching a Road Safety Camera, and the warning for cameras is enabled in Settings.	Tap this area to suppress the audible camera warning.
	Stops the running simulation	This icon appears during Route Fly Over, Route Simulation, and Track Log playback.	Tap this area to stop the simulation.
	Route recalculation progress	During route recalculation, this field shows the recalculation progress between 0% and	Nothing happens if you tap this area of the screen.

Icon	Information	Details	Action
		100%.	
	Indicator strip	 - all sounds are muted  - a Track Log is being recorded  - the route has been recalculated based on TMC information  - Bluetooth connection status	Nothing happens if you tap this area of the screen.



The following information can be seen in the three data fields shown on the map screen. Tap this area to open the Trip Information screen where you can select which values to be shown in these three fields.



When there is no active route, these fields show the following information: current speed, compass and the current time of day.

Icon	Type	More information
	Compass	Shows the direction of your heading both when the map is automatically rotated (3D) and when the map is always facing North (2D).
	Speed information	There are speed values that can be shown: <ul style="list-style-type: none"> • Current speed • Speed limit on the current road
	Time information	There are time values that can be shown: <ul style="list-style-type: none"> • Current GPS time • Time remaining to reach the destination • Time remaining to reach the next via point • Estimated arrival time at the destination • Estimated arrival time at the next via point
	Distance information	There are distance type values that can be shown: <ul style="list-style-type: none"> • Distance remaining to reach the destination • Distance remaining to reach the next via point • Current altitude

The next area is a combined status field.

 
Tap this area to open the Cockpit menu (page 49).

Icon	Status for	More information
	GPS position quality	The more lit bars, the better is the GPS position.
	Battery status	The device is running on battery power. The number of lit bars represent the remaining capacity.

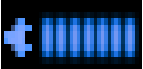








Icon	Status for	More information
	The battery is being charged	The device is running on external power. The battery is being charged.
	Vehicle type	The symbol displays the vehicle type used for route calculation.

2.4.4 Using the Cursor (the selected map location)

First, place the Cursor at the desired map location with one of the following options:

- Use the Find menu to select a location. The map returns with the selected point (the Cursor) in the middle, and the Cursor menu appears with the available options.
- Tap the screen and tap again to place the Cursor at the desired location. Now tap  to open the Cursor menu.

You can perform the following actions:


Button	Action
 Set as Start	In the active route, uses the Cursor as the start point by replacing the current GPS position (available in Advanced mode only)
 Set as Destination	In the active route, uses the Cursor as the destination by replacing the previous destination
 Insert as Via	In the active route, uses the Cursor as a via point (an intermediate destination) preceding the destination (available in Advanced mode only)
 Continue	In the active route, uses the Cursor as the destination while keeping the previous destination as a via point (available in Advanced mode only)
 Routing Methods	Shows the different routes calculated by the available routing methods. Choose the one that suits your needs the best.(available in Advanced mode only)
 Save as POI	Saves the Cursor as a POI(available in Advanced mode only)
 Add to Favorites	Saves the Cursor as a Favorite location
 Save as Camera	Saves the Cursor as a Road Safety Camera location (available in Advanced mode only)
 Place Pin	Marks the map with a Pin at the Cursor (available in Advanced mode only)
Info	Opens a screen with the name, address and coordinate information of the Cursor, and the list of POIs near it

2.5 Clarion EZ Drive concepts

2.5.1 Smart Zoom

Smart Zoom is a lot more than just a usual automatic zoom:

- **While following a route calculated by Clarion EZ Drive:** when approaching a turn, it will zoom in and raise the view angle to let you easily recognize your maneuver at the next junction. If the next turn is at a distance, it will zoom out and lower the view angle to be flat so you can see the road in front of you.
- **While driving without an active route in Clarion EZ Drive:** Smart Zoom will zoom in if you drive slowly and zoom out to the limit set here when you drive at high speed.

Enabling Smart Zoom: Tap the map to let the map control buttons appear, and then tap  to enable Smart Zoom.


Fine-tuning Smart Zoom: Tap the map to let the map control buttons appear, and then tap and hold





to open the Smart Zoom Settings window. Modify the zoom limits of Smart Zoom if necessary.


2.5.2 Position markers

2.5.2.1 Current GPS position and Lock-on-Road

When your GPS position is available, Clarion EZ Drive marks your current position with the  icon on the map. The exact location of the position marker depends on the vehicle type used for route calculation.



The vehicle type can be selected in Route settings (page 59) or in the Cockpit menu (page 49).


- If you choose pedestrian: The  icon is at your exact GPS position. The direction of the icon shows your actual heading.
- If you choose any of the vehicles: The  icon is aligned to the nearest road to suppress GPS position errors. The direction of the icon is one of the directions of the route.

To use the current GPS position, tap . The Position menu appears and you can save the GPS position as one of the following:


- a Favorite
- a Road Safety Camera
- a POI
- a map marker Pin


2.5.2.2 Returning to GPS position

When GPS position is available, and you have moved the map (the  icon is moving or is not even visible), the  button appears. Tap it to move the map back to the GPS position.

 **Note!** Even if you move the map while you are driving, Clarion EZ Drive continues navigating if there is an active route: it plays the voice instructions and displays the turn preview icons according to your current GPS position.

2.5.2.3 Selected location (Cursor)

If you select a location in the Find menu, or you tap the map when the map control buttons are visible, the Cursor appears at the selected point on the map. Clarion EZ Drive displays the Cursor with a radiating red dot () to make it visible at all zoom levels, even when it is in the background of a 3D map view.

When the Cursor is set, tap . The Cursor menu appears and you can use the Cursor as one of the following:

- the start point of a route
- a via point in a route
- the destination of a route


You can also search for POIs around the Cursor.



You can save the location of the Cursor as:

- a Favorite
- a Road Safety Camera
- a POI
- a map marker Pin

2.5.2.4 Original position in the Cursor menu

When the Cursor menu is open, a special icon () shows the Cursor position the menu was opened with.

You can move and zoom the map, and you can set the Cursor to a different place. The usual Cursor () appears, and the buttons of the Cursor menu initiate actions for this new location.

To return to the original Cursor position, tap . The map jumps back to the position with which the Cursor menu was opened, and the  icon appears again.

2.5.3 Daytime and night color schemes

Clarion EZ Drive uses different color schemes during the day and during the night.

- Daytime colors are similar to paper road maps.
- The night color schemes use dark colors for large objects to keep the average brightness of the screen low.

Clarion EZ Drive offers different daytime and night color schemes. It can also switch automatically between the daytime and the night scheme based on the current time and GPS position a few minutes before sunrise, when the sky has already turned bright, and a few minutes after sunset, before it becomes dark.

2.5.4 Color scheme in tunnels

When entering a tunnel, the colors of the map change. The large objects (such as surface waters or forests) and the empty areas between roads become black.

However roads and streets keep their original colors from the daytime or night color scheme currently used.

After leaving the tunnel, the original colors return.

2.5.5 Route calculation and recalculation

Clarion EZ Drive calculates the route based on your preferences:

- Route calculation method:
 - Fast
 - Short
 - Economical
 - Easy
- Vehicle types :
 - Car
 - Taxi
 - Bus
 - Emergency vehicles
 - Bicycle
 - Pedestrian
- Road types
 - Unpaved Roads
 - Permit Needed
 - Highways
 - Toll Roads
 - Charge Roads
 - Ferries

- Cross-border Planning
- Carpool Lanes


Clarion EZ Drive automatically recalculates the route if you deviate from the proposed itinerary.

Depending on the type of the TMC event, Clarion EZ Drive also recalculates the route if a TMC event concerns a part of the recommended route.

For further information about route planning options, see page 59.

2.5.6 Itinerary

The Itinerary is the list of the route events, that is, the driving instructions.

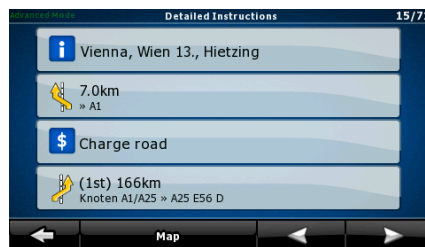

When you are on the Map screen, you can display the Itinerary in one of the following ways:

- Tap the area between the Turn preview and the Travel data fields where the symbol of the





second next maneuver is displayed (for example







- In Advanced mode, tap the following buttons:

You have the following options on the Itinerary screen:

Button	Description
Any of the list items	Opens the map with the selected maneuver in the middle.
Mode	Changes the detail level of the Itinerary. The levels are as follows: <ul style="list-style-type: none"> • Detailed Instructions: all intersections are listed • Itinerary: only significant intersections (the ones announced in voice guidance) are listed • Road list: the list of the roads used while navigating the route
 	Turns the page for additional list items.

When the map is open with a maneuver in the middle:

Button	Description
	Zooms in the map.
	Zooms out the map.
 	Moves the map to show the previous or next maneuver.
Avoid...	Opens a screen where you can avoid a part of the route starting from

Button	Description
	the selected maneuver.

2.5.7 Track Logs

Clarion EZ Drive can log the track that you drive (page 37).



A Track Log is a recording of how your GPS position changed and it is independent of the route Clarion EZ Drive calculated.

Track Logs can be recorded, renamed, replayed, shown on the map, exported to a memory card in GPX format, and deleted. See page 54.

2.5.8 Route demonstration

A simulation drives you through the route, following the driving instructions (page 35). You can choose from a simulation at high speed or at normal driving speed.

You can use it, for example, to see which bridge Clarion EZ Drive planned for the route; if you do not want to take that bridge, you can avoid it.




Route demonstrations can be started from the Route menu by tapping the  (high speed simulation) or the  (simulation at normal speed) button.


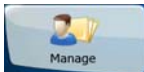
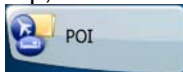
2.5.9 POI (Points of Interest)

A point of interest (POI) is a location that someone might find useful or interesting. Clarion EZ Drive is delivered with thousands of POIs and you can also create your own POIs in the application.

POI locations are marked on the map with special icons. POI icons are quite large so you can easily recognize the symbol. The icons are also semi-transparent: they do not cover the streets and intersections behind them.

POIs are grouped into several levels of categories and subcategories. The icon of a POI that comes with the map shows the symbol of the POI category. If you save your own POI, you can select an icon for it independently of the POI category you have put it in.

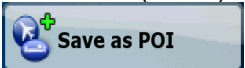



To save a POI, place the Cursor () at the desired location, then tap the following buttons: , .


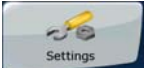


You can select which POI groups to show and which ones to hide on the map, and from which zoom levels POI icons are visible. Tap the following buttons: , , .

2.5.10 Road Safety Cameras



The location of a Road Safety Camera is a special POI. They cannot be searched like other POIs, and there is a special proximity warning only for cameras.

Is ESD580 shipped with a built-in database of Road Safety Cameras?	No
Can you save the Cursor as the location of a Road Safety Camera?	Yes

To save the location of a Road Safety Camera, place the Cursor () at the desired location, then tap the following buttons: , , .





The warning for Road Safety Cameras can be turned on in Warning Settings. Tap the following buttons: , , , .


When you approach a Road Safety Camera with the warning enabled, the following happens:

- The type of the camera is displayed in the secondary Turn Preview field (for example .
- If there is no speed limit given for the camera, or your speed is under the given speed limit, single beeps warn you about the camera.
- If you exceed the speed limit of the camera, the following also happens:
 - a symbol with the speed limit appears in the corner of the map (for example: ),
 - a special alert sound is played.

2.5.10.1 Camera types





There are different types of Road Safety Cameras.

Symbol	Type	Description
	Fixed	Some speed cameras stand by the roadside, looking in one direction, measuring one or both directions of the traffic. They measure your current speed. For these speed cameras you can specify the controlled traffic direction and the speed limit. Clarion EZ Drive warns you when you approach these speed cameras in the measured direction. If your speed exceeds the speed limit near the speed camera, Clarion EZ Drive plays a special warning sound.
	Mobile	Some speed cameras are operated from vehicles. They do not always work and they are not set to check a preset speed limit. The warning is similar to fixed speed cameras, but as there is no speed limit given, only the proximity is announced.
	Built-in	Some speed cameras are built into traffic lights. They work like fixed speed cameras, but they are difficult to spot. The warning for proximity and speeding is the same as for the fixed speed cameras.
	Section control	<p>These speed cameras work in pairs, and do not measure your current speed but your average speed between the two speed cameras. Both identify your car and record the exact time you pass them. They use the difference between the two points in time to calculate your average speed.</p> <p>Clarion EZ Drive warns you when you approach one of these speed cameras, but as you pass by, the warning stays on, and your average speed is measured until you reach another speed camera of this type. If your average speed exceeds the speed limit between the two speed cameras, you receive the same special</p>

Symbol	Type	Description
		warning sound as with the other speed camera types. In the rare case Clarion EZ Drive cannot register the moment you pass the second speed camera (for example, it is placed at the exit of a tunnel where GPS position is not yet available) the warning continues. Just tap the speed camera symbol displayed on the screen to stop the warning.
	Red light	These cameras check if you obey traffic lights. The warning is similar to mobile speed cameras: as there is no speed limit given, only the proximity is announced.

2.5.10.2 Camera directions

A speed camera can measure the speed of one direction of the traffic, both directions, or even several directions in an intersection, when they are mounted on a rotating base. The same directions apply to red light cameras. Clarion EZ Drive warns you only if you drive in a measured or possibly measured direction. The measured direction of the camera appears with the following symbols:

Symbol	Description
	The camera checks the speed of the direction into which you are driving.
	The camera checks the speed of the opposite driving direction.
	The camera checks the speed in both directions on the road.
	The camera can check the speed in any direction.


2.5.11 Speed limit warning

Maps sometimes contain information about the speed limits of the road segments. This information may not be available for your region (ask your local dealer) or may not be fully correct for all roads on the map.

You can configure Clarion EZ Drive to warn you if you exceed the current limit. Tap the following

buttons:    **Warn When Speeding**

When you exceed the speed limit, the following happens:

- A symbol with the speed limit appears in the corner of the map (for example: ,
- An audible warning message is played.

2.5.12 TMC (Traffic Message Channel)

Clarion EZ Drive can provide you with even better routes if Traffic Message Channel (TMC) information is available. The TMC is a specific application of the FM Radio Data System (RDS) used for broadcasting real-time traffic and weather information.

TMC is enabled by default in Clarion EZ Drive.



Note! TMC is not a global service. It may not be available in your country or region. Ask your

 
local dealer for coverage details.

You need a TMC receiver attached to your device to receive TMC data.

If public TMC data is broadcast at your location, Clarion EZ Drive automatically takes into account the TMC data received. You do not need to set anything in the program. The receiver will automatically search the FM radio stations for TMC data, and the decoded information will immediately be used in route planning. The moment Clarion EZ Drive receives traffic information that may affect your route, the program will warn you that it is recalculating the route, and navigation will continue with a new route that is optimal considering the most up-to-date traffic conditions.

If necessary, you can change the settings related to TMC, or select a specific radio station to receive.

Tap the following buttons:



3 Navigating with Clarion EZ Drive




You can set up your route in Clarion EZ Drive in several ways:

- if you need a simple route (a route with only one destination, without any intermediate via points), you can select the destination and start navigating to it right away
- you can plan a multi-point route (available in Advanced mode only)
- you can also plan a route independently of your current GPS position or even without GPS reception (available in Advanced mode only)





3.1 Selecting the destination of a simple route


Clarion EZ Drive offers you several ways of choosing your destination and via points (intermediate destinations):

- Use the selected location on the map (the Cursor) (page 27).
- Enter a full address or a part of an address, for example a street name without a house number or the names of two intersecting streets (page 28).
- Enter an address with ZIP code (page 31). This way you do not need to select the name of the city and the search for street names might be faster as well.
- Use a coordinate (page 34)
- Use a saved location:
 - a Favorite (page 32)
 - a POI (page 33)
 - the History of previously set destinations and waypoints (page 34)

 **Tip!** If you are going to use a route later, save it before you start navigating. Tap the following buttons:   .

3.1.1 Selecting the Cursor as the destination


1. Locate your destination on the map: move and scale the map as needed (page 13).
2. Tap the location that you want to select as your destination. The Cursor () appears.
3. Tap  to open the Cursor menu.
4. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

 **Tip!** If you know that you will use a destination later, when the Cursor menu appears, save it as a POI, or put it on the list of your Favorites first. The Cursor menu returns

automatically with the same point. Now you can use it as a route point.

3.1.2 Entering an address or part of an address

If you know at least a part of the address, it is the quickest way to select the destination of the route.

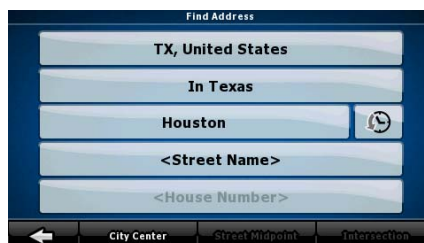
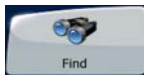




Using the same screen, you can find an address by entering:

- the exact address, including house number
- the center of a city
- an intersection
- the midpoint of a street
- any of the above, starting the search with the ZIP code (page 31)


3.1.2.1 Entering an address

The procedure is explained starting from the Navigation menu.

1. Tap the following buttons:  (Simple mode), or ,  (Advanced mode).
2. By default, Clarion EZ Drive proposes the country/state and city where you are. If needed, tap the button with the name of the country/state, and select a different one from the list.
3. If needed, change the city:

- To select the city from the list of recently used ones, tap the  button.
- To enter a new city:


1. Tap the button with the name of the city, or if you have changed the

country/state, tap .

2. Start entering the city name on the keyboard.







3. Get to the list of search results:

- After entering a couple of characters, the names that match the string appear in a list.

- Tap  to open the list of results before it appears automatically.


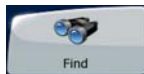




4. Pick the city from the list.






4. Enter the street name:

1. Tap .
2. Start entering the street name on the keyboard.
3. Get to the list of results:
 - After entering a couple of characters, the names that match the string appear in a list.
 - Tap  to open the list of results before it appears automatically.
4. Pick the street from the list.
5. Enter the house number:
 1. Tap .
 2. Enter the house number on the keyboard.
 3. Tap  to finish entering the address.
6. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.2.2 Selecting an intersection as the destination

The procedure is explained starting from the Navigation menu.


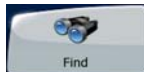



1. Tap the following buttons:  (Simple mode), or ,  (Advanced mode).
2. By default, Clarion EZ Drive proposes the country/state and city where you are. If needed, tap the button with the name of the country/state, and select a different one from the list.
3. If needed, change the city:
 - To select the city from the list of recently used ones, tap the  button.
 - To enter a new city:
 1. Tap the button with the name of the city, or if you have changed the country/state, tap .
 2. Start entering the city name on the keyboard.
 3. Get to the list of search results:
 - After entering a couple of characters, the names that match the string appear in a list.
 - Tap  to open the list of results before it appears automatically.

4. Pick the city from the list.
4. Enter the street name:
 1. Tap .
 2. Start entering the street name on the keyboard.
 3. Get to the list of results:
 - After entering a couple of characters, the names that match the string appear in a list.
 - Tap  to open the list of results before it appears automatically.
 4. Pick the street from the list.
5. Tap the  button.
 - If only a few intersecting streets exist, their list appears immediately.
 - In case of a longer street, a keyboard screen appears. Start entering the name of the intersecting street on the keyboard.
6. Tap the other street in the list.
7. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.2.3 Selecting a city center as the destination


The City Center is not the geometric center of the city but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is an important intersection.

The procedure is explained starting from the Navigation menu.

1. Tap the following buttons:  (Simple mode), or ,  (Advanced mode).
2. By default, Clarion EZ Drive proposes the country/state and city where you are. If needed, tap the button with the name of the country/state, and select a different one from the list.
3. If needed, change the city:
 - To select the city from the list of recently used ones, tap the  button.
 - To enter a new city:
 1. Tap the button with the name of the city, or if you have changed the country/state, tap .
 2. Start entering the city name on the keyboard.
 3. Get to the list of search results:



- After entering a couple of characters, the names that match the string appear in a list.



- Tap  to open the list of results before it appears automatically.

4. Pick the city from the list.


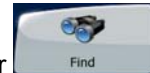

4. Tap the  button.

5. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.2.4 Entering an address with a ZIP code


The procedure is explained starting from the Navigation menu.



1. Tap the following buttons:  (Simple mode), or ,  (Advanced mode).
2. By default, Clarion EZ Drive proposes the country/state and city where you are. If needed, tap the button with the name of the country/state, and select a different one from the list.
3. Tap the button with the name of the city, and enter the ZIP code:
 1. Start entering the ZIP code on the keyboard.
 2. Get to the list of results:

- After entering a couple of numbers, the ones that are a match appear in a list.



- Tap  to open the list of results before it appears automatically.

3. Pick the city from the list.

4. Enter the street name:


1. Tap .

2. Start entering the street name on the keyboard.

3. Get to the list of results:

- After entering a couple of characters, the names that match the string appear in a list.



- Tap  to open the list of results before it appears automatically.



4. Pick the street from the list.

5. Enter the house number:


1. Tap .

2. Enter the house number on the keyboard.

3. Tap  to finish entering the address.

6. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.






3.1.2.5 Tips on entering addresses quickly

- When you are entering the name of a city or a street, Clarion EZ Drive only displays those characters that appear in possible search results. The other characters are greyed out.
- When entering the city name or the street name, tap the  button after a couple of letters; Clarion EZ Drive lists the items that contain the character set.
- You can speed up finding an intersection:
 - Search first for the street with a less common or less usual name; fewer letters are enough to find it.
 - If one of the streets is shorter, search for that one first. You can then find the second one faster.
- You can search for both the type and the name of a road. If the same word appears in several names, for example in the name of streets, roads and avenues, you can obtain the result faster if you enter the first letter of the street type: For example, enter **Pi A** to obtain **Pine Avenue** and skip all **Pine Streets** and **Pickwick Roads**.
- You can also search in ZIP codes. This is useful when a street name is common and it is used in several districts of a city.

3.1.3 Selecting the destination from your Favorites

You can select a location that you have already saved as a Favorite to be your destination.



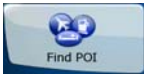



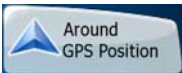

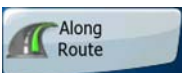






The procedure is explained starting from the Navigation menu.

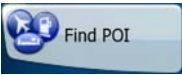


1. Tap the following buttons:  (Simple mode) or   (Advanced mode).
2. Tap the Favorite that you want to set as your destination.
3. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.4 Selecting the destination from the POIs

You can select your destination from the POIs included with Clarion EZ Drive or from the ones you have previously created.

The procedure is explained starting from the Navigation menu.







1. Tap the following buttons:  (Simple mode), or , 
2. Select the area around which the POIs should be searched:
 - : The POI will be searched around a given address.
 - : The map appears with the Cursor in the middle. Modify the location of the Cursor if necessary, then tap . The POI will be searched around a given address.
 - : The POI will be searched around the current GPS position.
 - : The POI will be searched around the destination of the active route.
 - : The POI will be searched not around a given point but by the size of the detour it means from the active route. This can be useful if you search for a later stopover that causes only a minimal detour. For example upcoming gas stations or restaurants.
3. You can narrow the search with the following:
 - Select the POI group (e.g. Finance), and after that, if needed, select the POI subgroup (e.g. Bank).
 - To find the POI by its name, tap , and use the keyboard to enter a part of the name.
 - To list all POIs in a given POI group, press , and then  without entering any letters of its name.
4. [optional] When finally the list of results appear, you can sort the list:
 - : sort the list alphabetically (available when you search around a single location)
 - : sort the list by the distance from your current position in a straight line (available when you search around a single location)
 - : sort the list by the distance to drive on route from your current position (available when you search along the active route)

- : sort the list by the size of the needed detour (available when you search along the active route)
5. Tap the desired POI in the list.
 6. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.5 Selecting the destination from the History

The destinations that you have set earlier appear in the History.


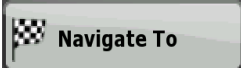


The procedure is explained starting from the Navigation menu.



1. Tap the following buttons:  (Simple mode), or   (Advanced mode).
2. If necessary, turn the page with  to see earlier destinations.
3. Tap the desired item.
4. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.

3.1.6 Selecting the destination by entering its coordinate

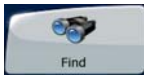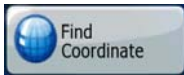This feature is available in Advanced mode only.

The procedure is explained starting from the Navigation menu.

1. Tap the following buttons:  .
2. [optional] Tap  to change the format of the displayed coordinates.
3. Tap the latitude or longitude value to change the coordinate.
4. Enter the coordinate values in WGS84 format on the keyboard: the latitude (N or S) and the longitude (E or W).
5. Tap .

6. The map appears with the selected point in the middle. Tap  (Simple mode) or  (Advanced mode) from the Cursor menu. The route is then automatically calculated, and you can start navigating.



3.2 Creating a multi-point route

This feature is available in Advanced mode only.

1. Multi-point routes are extended from simple routes, so a route must be active first.
2. Select a new location as you did in the previous sections. This will be the additional destination in the route.
3. The map appears with the selected point in the middle, and the Cursor menu opens automatically.

4. Tap  to open the full Cursor menu with the additional functions.

5. Now add the new point to the existing route:

- Tap  to add the point as an intermediate destination preceding the final destination of the route.
- Tap  to add the point as a new final destination demoting the previous one to the last intermediate destination.

6. [optional] To add more points to the route, repeat the above steps as many times as you like.



If you insert a via point in a route that is already a multi-point route, you will automatically be taken to the Route Edit screen where you can determine the position of the intermediate route point. When you enter the screen, the new via point is placed as the last via point before the final destination.


Every time a new point is added, the route is recalculated automatically, and you can start navigating right away.


3.3 Watching the simulation of a route


This feature is available in Advanced mode only.

The procedure is explained starting from the Map screen.

1. Tap the following buttons:  .
2. The Route menu appears. There are two ways of running the route simulation:

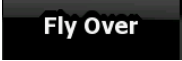- Tap  to run the simulation at high speed to give you a quick overview of the route.

- Tap  to run the simulation at normal speed and with voice guidance instructions announced. This option is for demonstration purposes, or for checking difficult parts of the route in advance.



3. The simulation can be aborted any time by tapping the  button or by tapping the map, and tapping it again.

3.4 Enabling Safety Mode

This feature is available in Advanced mode only.

Safety Mode disables the touch screen above 10 km/h (6 mph) to keep your attention on the road. While driving, you will not be able to set a new destination or to change settings. The only screen control that remains enabled is the gesture that puts you back on the Map screen.

The procedure is explained starting from the Map screen.

 

Tap the following buttons: , , , .



3.5 Pausing the active route

 
You do not need to pause the active route: when you start driving again, Clarion EZ Drive restarts the voice instructions from your position.




3.6 Deleting the active route

The easiest way to delete the active route in both Simple mode and Advanced mode is to open the

Route Information screen by tapping the Turn Preview field () on the Map screen, and then tapping .


In Advanced mode, you have another option. Tap the following buttons: , .



 **Note!** If via points exist in the active route, you cannot delete the route immediately on the Route Information screen. Tap  repeatedly until all via points disappear and the  button appears. Tap it to cancel the whole route.

3.7 Using Track Logs

Clarion EZ Drive can record the track (how your GPS position changed) that you drive.

 **Tip!** You do not need to select a destination and create a route for this; you can also record your driving path while cruising.


This feature is available in Advanced mode only.

The procedure is explained starting from the Map screen.

Recording the travelled path (creating a Track Log)


1. Start driving.

2. Tap the following buttons:  ,  , .


3. Start the recording: tap the  button.


You return to the map and you can continue driving.


4. Repeat the above steps, then tap  later to stop the recording. Clarion EZ Drive labels the Track Log with a time stamp.

(As an alternative, you can tap the  button in the Cockpit menu to start, and later to stop the Track Log recording.)



Viewing a Track Log on the map

1. Tap the following buttons:  ,  , .

2. Locate the desired Track Log, and then tap the  button next to it.
3. The map returns, and the Track Log simulation (a life-like replay) begins.

4. You can stop the replay any time by tapping the  button.



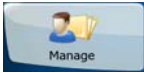

Changing the color of a Track Log

1. Tap the following buttons:  ,  , .
2. Tap the desired Track Log and then tap one of the color buttons.

3.8 Saving a route

This feature is available in Advanced mode only.

The procedure is explained starting from the Map screen.

1. Tap the following buttons: , , .
2. Enter a name for the saved route, and then tap .




When you save a route, Clarion EZ Drive not only saves the route points but the whole itinerary:

- The saved route might have been influenced by TMC information. When you later use the route, it appears as it was saved, but if it needs to be recalculated, the current TMC information will be used in the new route.
- If you updated your map since you first saved the route, Clarion EZ Drive recognizes the change, and recalculated the driving instructions according to the latest available map information.
- Clarion EZ Drive deletes from the route the via points that you already left behind during navigation and the road segments used to reach it. To avoid this, if you want to save the route, you need to save it before you start navigating.

3.9 Loading a saved route

This feature is available in Advanced mode only.

The procedure is explained starting from the Map screen.


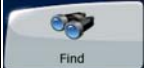



1. Tap the following buttons: , , .
2. Tap the route you wish to navigate.
3. In the very likely case when the start position of the saved route is different from the current GPS position, you need to confirm whether you want to stop navigating from the current GPS position to use the start point of the loaded route.
 - If you choose this option, the automatic off-route recalculation will be disabled.
 - If you choose to keep the current GPS position as the start point, the route will be recalculated starting from your current position.
4. The map appears, and you can start navigating.

4 Reference book (Advanced mode)

On the following pages you will find the description of the different menu screens of Clarion EZ Drive in Advanced mode. In Simple mode, these functions work the same way, but only a few of them are available.

The Navigation menu:

Clarion EZ Drive starts with the Navigation menu. From there you can access the following screens:

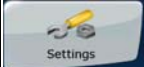Screen	Button	Description
Map		The Map screen.
Find		Selecting the destination (for example an address or a POI) or using the search engine of Clarion EZ Drive for any other reason (for example to look for the phone number of a POI).
Route		Managing the active route (obtaining information about it, changing or deleting it or parts of it) or planning a route without GPS reception.
Manage		Managing user data, such as saved points (POIs, Favorites, Pins, and History items), Saved Routes, and Track Logs.
Settings		Managing the navigation settings, for example the language settings or the settings of the map display.


 
4.1 Map screen












Clarion EZ Drive is primarily intended for land navigation. That is why maps in Clarion EZ Drive look similar to paper road maps. However, Clarion EZ Drive provides much more than regular paper maps: you can customize the look and the content of the map.











The most important and most often used screen of Clarion EZ Drive is the Map screen.



During navigation, the screen shows route information and trip data (left screenshot), but when you tap the map, additional buttons and controls appear for a few seconds (right screenshot). Most parts of the screen behave as buttons.

Symbol	Name	Action
	Turn Preview, that is, the next route event	Opens the Route Information screen
	Second upcoming route event	Opens the Itinerary

Symbol	Name	Action
	Trip data	Opens the Trip Information screen
	Battery status	Opens the Cockpit menu
	GPS position quality	Opens the Cockpit menu
	Vehicle used in route calculation	Opens the Cockpit menu
Top row	Next street	n/a
Bottom row	Current street	n/a
	Map view modes	Switches between 2D and 3D map modes
	Menu	Opens the Navigation menu
	Detour	Opens the Detour screen, two ways of modifying the route: <ul style="list-style-type: none"> the list of Saved Search Criteria a button to avoid parts of the route
	Position menu (appears when navigating a route)	Opens the Position menu
	Cursor menu (appears when there is no GPS position or the Cursor is not at the current GPS position)	Opens the Cursor menu
	Open/Close Map control buttons	Tap this button to show or hide the following map control buttons: <ul style="list-style-type: none"> Zoom in/out Rotate left/right (3D map only) Tilt up/down (3D map only) Zoom preset buttons (2D map only) Tilt and zoom preset buttons (3D map only) Return to GPS position button Smart Zoom button
	Rotate left, rotate right	Rotates the 3D map left or right

Symbol	Name	Action
	Tilt up, tilt down	Tilts the 3D map
	Zoom in, zoom out	Scales the map
	Return to GPS position (appears when GPS position is available and you have moved the map)	Tap this button to move the map back to the current GPS position.
	Enable Smart Zoom (replaces the previous button if there is no GPS position or the map has not been moved)	<p><u>Tap this button once</u> to enable Smart Zoom.</p> <p><u>Tap&hold the button</u> to set the zoom limits of Smart Zoom.</p>
	Zoom preset buttons	<p><u>Tap one of the preset buttons</u> to set the zoom level to a fix, predefined value. Smart Zoom is disabled. These buttons are available in 2D mode.</p> <p><u>Tap&hold any of the buttons</u> to set its value to the current zoom level, or to reset it to its original value.</p>
	Tilt preset buttons	<p><u>Tap one of the preset buttons</u> to set the tilt and zoom levels to fix, predefined values. Smart Zoom is disabled. These buttons are available in 3D mode.</p> <p><u>Tap&hold any of the buttons</u> to set its value to the current tilt and zoom levels, or to reset it to its original value.</p>
	Current GPS position (on nearest road)	n/a
	Cursor (selected map location)	n/a
	Lane information	n/a
Green line	Active route	n/a
	Map scale (2D map only)	n/a

4.1.1 Icons on the map

There are several status icons on the map. Most of them also function as a button. The information they provide is as follows:





- GPS position quality
- Battery status
- Vehicle type used for route calculation

- Sound status (muted or enabled)
- Track log recording status
- TMC reception status
- Bluetooth connection and communication status



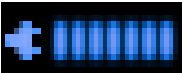

4.1.1.1 Battery, GPS position quality and Vehicle type indicator

This is a complex indicator, and a button that opens the Cockpit menu.





The battery part shows information about the rechargeable battery of the device.



Icon	Description
	The battery is charging. The device runs on external power.
	The battery is not charging but it is full.
	The battery is not full but it still has enough capacity.
	You need to recharge the battery.

The GPS reception quality shows the current accuracy of the position information.

Icon	Description
	Clarion EZ Drive has no connection to the GPS receiver: GPS navigation is not possible. Devices with a built-in GPS receiver are permanently connected. On such devices, the icon does not appear in normal circumstances.
	Clarion EZ Drive is connected to the GPS receiver, but the signal is too weak and the receiver cannot determine the GPS position. GPS navigation is not possible.
	Only a few satellites are received. Position information is available, but elevation (altitude) cannot be calculated. GPS navigation is possible, but the position error may be significant.
	Altitude information is available, the position is a 3D position. GPS navigation is possible.









The remaining part of the field shows the vehicle type used for route calculation.

Icon	Vehicle type
	Car
	Taxi
	Bus
	Emergency vehicles

Icon	Vehicle type
	Bicycle
	Pedestrian

4.1.1.2 Status indicator strip



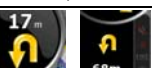


This is a complex indicator. In one strip it indicates the following status information:





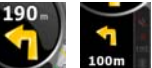


 

Icon	Description
	The sound output of Clarion EZ Drive is muted.
	The sound output of Clarion EZ Drive is enabled.
	Clarion EZ Drive records a Track log when GPS position is available.
	Track log recording is disabled.
	TMC information is received and used by Clarion EZ Drive.
	No TMC information has been received by Clarion EZ Drive.
	The Bluetooth is off.
	The Bluetooth is on.

4.1.1.3 Next two route events (Turn Preview fields)

There are two fields reserved on the Map screen to display the next two maneuvers (route events that are listed in the Itinerary). Both the type of the event (turn, traffic circle, exiting highway, etc.) and its distance from the current GPS position is displayed.

Most of these icons are very intuitive and you also know them as road signs. The following table lists some of the frequently shown route events. The same symbols are used in both fields:

Icon	Description
	Turn left.
	Turn right.
	Turn back.
	Bear right.
	Turn sharp left.

Icon	Description
	Keep left.
	Continue straight in the intersection.
	Enter traffic circle. The number of the exit is shown in the circle, but only for the next turn.
	Enter highway.
	Exit highway.
	Board ferry.
	Leave ferry.
	Approaching the next via point.
	Approaching the destination.

In certain situations when route events are not important, these fields show other useful pieces of information. They are described here: page 15.

4.1.2 Objects on the map




4.1.2.1 Streets and roads




Clarion EZ Drive shows the streets in a way that is similar to how the paper road maps show them. Their width and colors correspond to their importance: you can easily tell a highway from a small street.

 **Tip!** If you prefer not to see street names during navigation, turn them off (page 58).

4.1.2.3 Elements of the active route


Clarion EZ Drive shows the route in the following way:

Symbol	Name	Description
	Current GPS position (corrected)	Your current position displayed on the map. In pedestrian mode it is the exact GPS position, or if a vehicle is selected for route calculation, the arrow is put on the nearest road.
	Cursor (selected map location)	The location selected in the Find menu, or a map point selected by tapping the map.
	Start point	The first point of the route.

Symbol	Name	Description
		<p>Normally, if GPS position is available, it is the start point of the route. If there is no valid GPS position, Clarion EZ Drive uses the last known GPS position as the start point.</p> <p>When you are using a saved route, Clarion EZ Drive asks you if you want to use your GPS position or the first point in the saved route as the start point.</p> <p>You can also modify the start point in the Cursor menu. If you do so, the automatic off-route recalculation needs to be turned off to keep the selected point as the start point.</p> <p>If the automatic off-route recalculation is disabled for any of the above, tapping the  icon in the Turn Preview field not only initiates a route recalculation from the current GPS position, but it will re-enable the automatic off-route recalculation as well.</p>
	Via point	A via point is an intermediate destination. You can place as many via points as you want.
	Destination (end point)	The last point of the route, the final destination.
	Route color	The route always stands out with its color on the map, both in daytime and in night color mode. The active leg of the route is always displayed in a brighter shade than the inactive (upcoming) legs.
	Active leg of the route	<p>The section of the route on which you are driving.</p> <p>If you have not added any via points (only a destination), the entire route is the active leg. If you have added via points, the active leg is the part of the route from your current location to the next route point (the next via point, or the destination if there are no more via points to reach).</p>
	Inactive legs	The future sections of the route; each of them becomes active when you reach the via point at its beginning.
	Streets and roads that are excluded from the navigation	You can choose whether you want to use or avoid certain road types (page 59). However, when Clarion EZ Drive cannot avoid such roads, the route will include them and it will show them in a color that is different from the route color.

4.1.3 Cursor menu

















As soon as you select one point in the Find menu, the map appears with the Cursor menu, a menu with possible actions for the selected point.






Alternatively, when you tap the map, control buttons appear. Tap again to place the Cursor, a radiating red dot. Now tap , and the Cursor menu opens with a list of options.

In order to show a part of the map with the Cursor menu, it contains only a few buttons first. Tap

More Options...


to get all the options.

Button	Description
	Closes the Cursor menu, and returns to the previous screen.
	Zooms out the map.
	Zooms in the map.
	With the Cursor menu open, you can still move or scale the map, and tap the map anywhere to place the Cursor to a new location, but when you use this button, the Cursor jumps back to the place where it was at the time when you opened the Cursor menu.
	Displayed at the Cursor if it is at the same location with which the Cursor menu was opened.
	Displayed at the Cursor if it has been relocated since the Cursor menu was opened.
Info	Opens a new screen with the address and coordinate of the Cursor, and the list of nearby POIs.
More Options...	Opens the full-screen Cursor menu with all the possible options.
 Set as Destination	A new route is calculated with the Cursor as the destination. The previous route is deleted.
 Remove Destination	If the Cursor is at or near the destination, this button replaces the previous one, and deletes the current destination from the route. The last via point is promoted as destination, or if there are no via points, the route is deleted.
 Insert as Via	The Cursor is added to the active route as an intermediate route point, a point to be reached before the destination. If there is already a via point in the route, the Edit Route screen opens to let you decide where the new via point is to appear in the route.
 Remove Via	If the Cursor is at or near one of the via points, this button replaces the previous one, and deletes the selected via point from the route. The route is recalculated without the deleted point.
 Continue	The Cursor is appended at the end of the route as the new destination. The previous destination is demoted, and becomes the last via point.
 Routing Methods	This button is similar to the  Set as Destination button, but a new screen opens, and the route is calculated with all the possible route calculation methods (Fast, Short, Economical and Easy). Observe the results, and choose one of the routes to navigate.
 Set as Start	The Cursor becomes the start point of the route. This means that the route will not be started from the current GPS position, and Automatic Off-route Recalculation needs to be turned off to keep the start point the selected one.
 Remove Start	If the Cursor is at or near the selected start point, this button replaces the previous one, and deletes the start point from the route. The current GPS position is used again as the start point, and Automatic Off-route Recalculation is re-enabled.
 Save as POI	The Cursor is saved as a user POI. Select the POI group and give a name for the POI, then select a suitable icon, enter a phone number, and

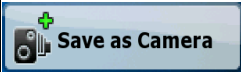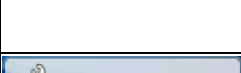Button	Description
	additional information if you like.
 Place Pin	Map locations can be marked with Pins. Unlike POIs, a Pin has no name and other details, only a color to let you tell from the other Pins on the map.
 Remove Pin	If the Cursor is at or near a Pin, this button replaces the previous one, and deletes the Pin the Cursor is near to.
 Save as Camera	The Cursor is saved as the location of a Road Safety Camera (speed camera or red light camera). A new screen opens where you can set the type of the camera, the direction of the measured traffic, and the speed limit checked (if applicable).
 Edit Camera	If the Cursor is at or near a Road Safety Camera, this button replaces the previous one, and opens a new screen where you can edit the details of the camera.
 Add to Favorites	The location of the Cursor is added to the list of frequently visited destinations, the so called Favorites. You can give a name for the Favorite.

 
4.1.4 Position menu

When you follow the recommended route on the map (the Cursor is the current GPS position), the Position menu replaces the Cursor menu. It does not contain buttons that modify the current route, as the GPS position is not useful as a route point.

To open the Position menu, tap .

4.1.5 Trip Information screen


The Trip Information screen has both route and travel data you might need during your journey.[SEG]

It can be opened directly from the Map screen by tapping the Trip Data field ().





The fields on this screen are continuously updated while you keep the screen open.

When you open the screen, all route data fields contain information about reaching your final


destination.[SEG] Tap  and the fields concerning your route display data for the next via point.[SEG] Tap the button repeatedly to toggle between the two possibilities.


You have the following data and functions on this screen:




Name	Description	Function
 or 	Shows whether the route data fields show information about the final destination ((Undefined variable: BrandingVariables.FlagOnMapDestination)) or about the	

Name	Description	Function
	next via point ((Undefined variable: BrandingVariables.FlagOnMapVia)).	
Field next to the flag	Shows the name or number of the current street or road.	
Turn Preview	Shows the type and distance of the next route event.	
Compass	Shows the current heading.	Tap this field to show it on the map screen in one of the Trip Data fields.
Speedometer	Shows the current speed both graphically and as a number.	Tap this field to show it on the map screen in one of the Trip Data fields.
Distance Remaining	Shows the distance you need to travel on the route before reaching your final destination.	Tap this field to show it on the map screen in one of the Trip Data fields.
Time Remaining	Shows the time needed to reach the final destination of the route based on information available for the remaining segments of the route.[SEG] The calculation cannot take into account traffic jams and other possible delays.	Tap this field to show it on the map screen in one of the Trip Data fields.
Arrival Time	Shows the estimated arrival time at the final destination of the route based on information available for the remaining segments of the route.[SEG] The calculation cannot take into account traffic jams and other possible delays.	Tap this field to show it on the map screen in one of the Trip Data fields.
GPS Time	Shows the current time corrected with time zone offset.[SEG] The accurate time comes from the GPS satellites, and the time zone information comes from the map or it can be set manually in Regional settings.	Tap this field to show it on the map screen in one of the Trip Data fields.
Altitude	Shows the elevation if it is provided by the GPS receiver.	Tap this field to show it on the map screen in one of the Trip Data fields.
Speed Limit	Shows the speed limit of the current street if the map contains it.	Tap this field to show it on the map screen in one of the Trip Data fields.
Trip Computer		Opens a new screen with three resettable Trip Computers.
Next Via Point		Tap this button to change the content of the Route Data fields to show information about the next via point.
Destination	If you tap the previous button, this one replaces it.	Tap this button and the Route Data fields show information about the final destination again.




Most of the fields on this screen have a  symbol next to them.[SEG] This symbol shows whether the field it is attached to is shown on the map as a Trip Data.[SEG] It also shows the position of the data as follows:

Symbol	Description
	This value is not shown on the map screen.

Symbol	Description
	This value appears on the map screen in the Trip Data area.[SEG] This is the value at the top.
	This value appears on the map screen in the Trip Data area.[SEG] This is the value in the middle.
	This value appears on the map screen in the Trip Data area.[SEG] This is the value at the bottom.





4.1.5.1 Trip Computer screen

The Trip Computer screen provides collected trip data.[SEG] It can be opened from the Trip Information screen by tapping  Trip Computer.

The fields on this screen are continuously updated while you keep the screen open.

You can switch between the trips, pause then resume them, or reset their data.

You have the following functions on this screen:

Name	Description
 Pause	Pauses the trip currently shown on the screen.[SEG] Values on the screen stop changing.
 Resume	This button replaces the previous one if it has been activated.[SEG] Tap it to resume collecting trip data.
 Reset	Resets all counters of the currently shown trip.[SEG] Collecting trip data is restarted only when Clarion EZ Drive receives a position from the GPS.
	Cycles through all trips.






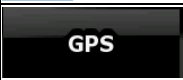


4.1.6 Cockpit menu

The Cockpit menu is a selection of controls that are frequently needed during navigation. It can be opened directly from the Map screen by tapping .



 
If you tap any of the switches in the Cockpit menu except for the Vehicle type, the Map screen immediately returns. A switch is on if its lamp is lit. The Vehicle type button is different. It is a multi-

value button. It opens a list of available choices, and the symbol of the selected vehicle is shown on the button.

Name	Description
Master Volume slider	Adjusts the sound volume of the device. All sounds of the application are involved.
	If you only adjust the volume, you need to use this button to return to the Map screen.
	Mutes all sounds of Clarion EZ Drive.
	Switches between the daytime and night color schemes manually. This will not disable the automatic switching between the two schemes: the other color scheme returns at the next scheduled time.
	Tap this button and select the Vehicle type to be used for route calculation. Otherwise it is selected in Route Planning options in Settings (page 59). Changing the Vehicle type triggers an automatic route recalculation.
	Turns track log recording on or off otherwise controlled on the Manage Track Logs screen.
	Opens the GPS Data screen with satellite information, data coming from the GPS receiver, and a shortcut to the GPS Settings screen if needed (GPS receiver detection is automatic).
	When a TMC receiver is connected to Clarion EZ Drive, this button opens the list of TMC messages, and provides access to the TMC Settings and the radio station settings screens.
	Opens up Bluetooth function. Please see hardware manual for details.

4.1.7 GPS data screen



Tap the following buttons:









to open the GPS Data screen and to see

the status of the GPS reception.

 



Icon	Color	Name	Description
	Green	GPS position quality indicator	Clarion EZ Drive has a connection to the GPS receiver and GPS position information is available in 3D: Clarion EZ Drive can calculate both your horizontal and vertical GPS position.
	Yellow		Clarion EZ Drive has a connection to the GPS receiver and GPS position information is available in 2D: only the horizontal position is





Icon	Color	Name	Description
	Grey		calculated, Clarion EZ Drive cannot calculate your vertical GPS position.
	Red		Clarion EZ Drive has a connection to the GPS receiver but GPS position information is not available.
	Red		Clarion EZ Drive has no connection to the GPS receiver. Since the device has a built-in GPS receiver, this status should not appear under normal circumstances.
	Green, blinking	GPS connection quality indicator	Clarion EZ Drive is connected to the GPS receiver.
	Yellow, blinking		Clarion EZ Drive has no connection to the GPS receiver but it is still trying to establish a connection.
	Red, blinking		Clarion EZ Drive has no connection to the GPS receiver and does not try to establish a connection.
Sky view circle			The virtual sky shows the visible part of the sky above you, with your position as the center. The satellites are shown at their current positions. The GPS receives data from both the green and amber satellites. Signals from the amber satellites are only received, while green ones are used by the GPS to calculate your current location.
n/a	Coordinates		Your current GPS position in WGS84 format.
n/a	Status bar for the satellites		Dark bars are for the amber and lit bars are for the green satellites. The more satellites your GPS tracks (the green ones), the better is your calculated position.

4.2 Find menu

Select the destination of your route. Tap the following buttons:

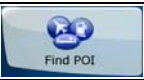



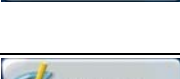
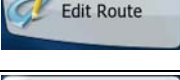
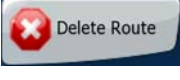
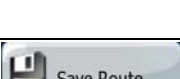
Button	Description	Instructions
	If you know at least a part of the address, this is the quickest way to find the location.	page 28

Button	Description	Instructions
	You can select your destination from the thousands of POIs included with Clarion EZ Drive or from the ones you have previously created.	page 33
	The destinations that you have already entered in Clarion EZ Drive are available in the History list.	page 34
	You can select your destination by entering its coordinates.	page 34
	You can select as your destination a location that you have already saved as a Favorite.	page 32
Plan on Map	Opens a special 2D map screen optimized for route planning. Only the Zoom in and Zoom out buttons and the route modification buttons of the Cursor menu appear.	

4.3 Route menu

 


Save, load and edit your routes. Tap the following buttons:

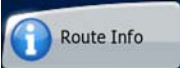Button	Description
	Opens a screen with useful route and travel data.
	You can browse the driving instructions that Clarion EZ Drive follows during navigation. You can exclude maneuvers or streets to adjust the route to your preferences.
	You can modify the route: you can add or remove route points, and change their order.
	Erase the active route with all its route points (start point, via points and destination). If you later decide that you need the same route, you will have to rebuild it from scratch.
	You can save the active route for later use.
	You can load a previously saved route for navigation.
Settings	Opens the Route settings screen with controls to modify the vehicle, the road types used for route calculation, or the route calculation method.
Fly Over	You can run a demonstration of the route at high speed.
Simulate	You can run a demonstration of the route at normal speed.

4.4 Manage menu

 
 
You can manage the content that Clarion EZ Drive stores. Tap the following buttons:



Button	Name	Description	Important instructions
	Manage Saved Routes	page 53	Renaming or deleting saved routes
	Manage History	page 53	Deleting History items
	Manage Track Logs	page 54	Recording, simulating, renaming or deleting track logs, assigning color to them to be shown on the map
	Manage Favorites	page 55	Renaming or deleting Favorites
	Manage POI	page 55	Creating, updating or deleting POIs Creating, updating or deleting POI groups Modifying POI visibility settings
	Manage Saved Search Criteria	page 56	Creating, renaming or deleting Saved Search Criteria

4.4.1 Manage Saved Routes

 
 
You can manage the previously saved routes. Tap the following buttons:






Button	Description
Button with the name of the saved route	Opens the selected route for editing.
	Deletes the selected route.
Clear All	Clears the list of saved routes.
	Turns the page for additional list items.

4.4.2 Manage History

You can manage the list of locations you used lately. Tap the following buttons:







Button	Description
	Deletes the selected item in the History.
	Deletes the entire History.
	Turns the page for additional list items.






4.4.3 Manage Track Logs

You can record Track Logs, then play them back, display them on the map, and see their details. Tap the following buttons:



 
Button	Description
	Starts recording the track that you drive. (You can also start recording a track log in the Cockpit menu.)
	Stops the ongoing Track Log recording. (You can also stop the track log recording in the Cockpit menu.)
Button with the name of the track log	Shows the details of the selected Track Log.
	Starts a simulated playback of the selected Track Log on the map.
	Turns the page for additional list items.

When track log details are shown:

Button	Description
Button with the name of the Track Log	Opens a keyboard screen to let you rename the Track Log.
	Tap this button to hide the Track Log on the map. No color will be assigned to the Track Log.
	Tap one of the colored buttons to assign a color to the Track Log. The Track Log will be shown on the map with this color.
	The map returns with the Track Log. The map is scaled to show the whole Track Log.
	Deletes the selected Track Log.
	Saves the Track Log on the inserted memory card in GPX format.

4.4.4 Manage Favorites

 
 
You can manage the list of your Favorites. Tap the following buttons:



Button	Description
Button with the name of the Favorite	Opens the selected Favorite for editing.
	Deletes the selected item in the list of Favorites.
Clear All	Clears the list of Favorites.
,	Turns the page for additional list items.

4.4.5 Manage POIs


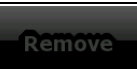
You can manage your POIs, and set the POI visibility for both your POIs and the ones that came with the product. Tap the following buttons:







Button / Icon	Description
Button with the name of the POI group	Opens the list of the subgroups of this POI group. The new list behaves the same as this one.
Button with the name and address of a POI item	Opens the selected POI for editing. Only the POIs you have created appear in this list.
Edit	Opens the selected POI group for editing.
My POI	Tap to filter the list to contain only the POIs that you saved.
All	Tap to see all POIs in the list.
New Group	Creates a new POI group at the given group level.
,	Turns the page for additional list items.
<input type="checkbox"/>	This POI group is not shown on the map.
<input checked="" type="checkbox"/>	This POI group and all its subgroups are shown on the map.
<input type="checkbox"/>	This POI group and some of its subgroups are shown on the map.
	This POI group contains POIs that you saved.

When a POI group is open for editing:

Button	Description
Off	Items in the POI group will not be shown on the map.
Close , Medium , ...	The distance buttons set the zoom level from which the items in the POI group will be shown on the map.

Button	Description
	Subgroups under the edited POI group will inherit its visibility settings.
Button with the icon of the POI group	Tap this button to select a new icon for the POI group.
	Deletes the edited POI group. You are only allowed to remove POI groups that you have created.

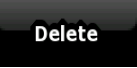


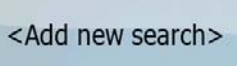
When a POI item is open for editing:

Button	Description
Button with the name of the POI	Tap this button to rename the POI.
Button with the icon of the POI	Tap this button to select a new icon for the POI.
	Tap to enter a telephone number for the POI.
	Tap to enter additional information for the POI.
	Deletes the selected POI.
	Tap to move the POI to another POI group or subgroup.

4.4.6 Manage Saved Search Criteria

You can manage the list of search criteria previously saved to easily find frequently searched POI types. Tap the following buttons:




Button	Description
Button with the name of the Saved Search Criteria	Tap to rename the saved query.
	Deletes the selected item in the list.
	Deletes the entire list.
	Turns the page for additional list items.
	Tap to save a new search criteria. Similar to how you search for a POI, select the search reference first, then select the POI group or subgroup to search in.

4.4.7 User Data Management

You can manage the data you have saved (Pins, POIs, Favorites, History, and Track logs) and the settings you have made in the program. Tap the following buttons:



User Data Management

Button	Description
Remove Pins	Map locations can be marked with Pins using the  button in the Cursor menu. Tap this button to remove all your Pins from the map.
Backup User Data	All user data and the current settings will be saved on the inserted memory card. There is always one backup file. If you perform a backup later, the previous backup will be overwritten with the new information.
Restore User Data	All user data and settings will be overwritten with the information stored in the backup file. Data and settings created after the latest backup will be lost.
Delete User Data	All user data will be deleted, and settings will return to their factory defaults.
Reset All Settings	All settings will return to their factory defaults.



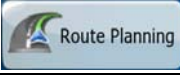

4.5 Settings menu





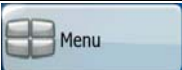
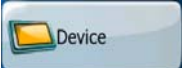

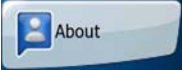

You can configure the program settings, and modify the behaviour of Clarion EZ Drive. Tap the following buttons:



The Settings menu has two pages of submenus. Tap  to access the other options.

 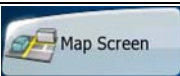


Button	Description	Important instructions
	page 58	You can fine-tune the appearance and content of the Map screen.
	page 59	You can adjust the sounds of Clarion EZ Drive.
	page 59	These settings determine how routes will be calculated.
	page 61	These settings allow you to adjust the application for your local language, measurement units, time and date and their

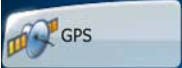Button	Description	Important instructions
		formats, as well as choose the voice guidance profile you prefer.
	page 62	You can control how Clarion EZ Drive behaves during navigation.
	page 63	You can enable some handy warnings, and disable the touch screen in a moving vehicle with Safety Mode.
	page 63	You can set up the connection to the GPS receiver.
	page 64	You can set up the connection to the TMC receiver.
	page 65	You can modify the look and behaviour of the Menu screens.
	page 66	You can change some device settings to control the screen backlight when Clarion EZ Drive is running.
	page 66	You can set up an automatic Track Log saving, and fine-tune its settings.
		This screen has no navigation feature. It merely provides information about the maps and licenses included with your navigation system.
		You can switch to Simple mode. In Simple mode only a few of the above settings are available. The rest of the settings are set to values that are optimal for typical use.

4.5.1 Map Screen settings

You can fine-tune the appearance and content of the Map screen. Tap the following buttons:

 
 


Button	Description
3D Settings	Use 3D settings to determine which of the present 3D objects are shown on the map, and adjust the level of 3D visual detail. The options are as follows: <ul style="list-style-type: none"> Elevated Roads: Complex intersections and vertically isolated roads (such as overpasses or underground tunnels) are displayed in 3D.
Color Profiles	Clarion EZ Drive is able to show the map and the menus in different colors during the day and during the night. Select the color profiles to be used in each mode, and select the automatic or manual switching between the daytime and night color profiles.
Show Street Names	Street names and POI icons can be disturbing on the map during navigation. With this switch you can suppress these map elements

Button	Description
	when Clarion EZ Drive is following your position on the map. If you move the map, both the street names and POI icons reappear immediately.
Lane Information	Some maps contain lane information to help you position your car in the upcoming intersection. This setting tells Clarion EZ Drive whether to display this information at the top or at the bottom of the map.

4.5.2 Sound settings

 
 
You can adjust the sounds of Clarion EZ Drive. Tap the following buttons:




Button	Description
Master Volume	Use the switch to mute all sounds of the device and then to re-enable them again. The position of the fader determines the volume level.
Voice Guidance Volume	The slider adjusts the loudness of voice prompts. In its leftmost position, the voice guidance is suppressed; in its rightmost position, the master volume applies.
Key Sounds	Key sounds are audible confirmation of tapping the touch screen. The switch turns the key sounds on or off. Key sounds are played at the master volume level.
Dynamic Volume	When driving at high speed, the noise in the car may be too loud to clearly hear the voice guidance and other sounds. Using Dynamic Volume you can instruct Clarion EZ Drive to increase the volume when your speed exceeds a certain minimum, and reach its highest volume at the given maximum speed.

4.5.3 Route Planning options

These settings determine how routes will be calculated. Tap the following buttons:



Button	Description
Vehicle	You can set the type of vehicle you will use to navigate the route. Based upon this setting, some of the road types will be excluded from the route (e.g. highways for pedestrians), or some of the restrictions may not be taken into account (e.g. emergency vehicles have only a few restrictions).
Road Types Used for Route Planning	To let the route fit your needs, you can also set which road types are to be considered for or to be excluded from the route, if possible. Excluding a route is a preference. It does not necessarily mean total

Button	Description
	prohibition. If your destination can only be accessed using some of the excluded road types, they will be used, but only as much as necessary. In this case a warning icon will be shown on the Route Information screen, and the part of the route not matching your preference will be displayed in a different color on the map.
Route Calculation Method	<p>You can choose from different route types. The routing method can also be chosen while creating the route: when the destination is selected, tap  in the Cursor menu.</p>

Vehicle types:

- Car
- Taxi
- Bus
- Emergency vehicles
- Bicycle
- Pedestrian

Road Types Used for Route Planning:


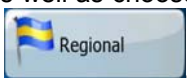
Type	Description
Highways	You might need to avoid highways when you are driving a slow car or you are towing another vehicle.
Unpaved roads	Clarion EZ Drive excludes unpaved roads by default: unpaved roads can be in a bad condition and usually you cannot reach the speed limit on them.
Toll roads	By default Clarion EZ Drive includes toll roads (pay roads where there is a per-use charge) in the routes. If you disable toll roads, Clarion EZ Drive plans the best toll-free route.
Charge roads	Charge roads are pay roads where you can purchase a pass or vignette to use the road for a longer period of time. They can be enabled or disabled separately from toll roads.
Permit needed	You might need a permit or permission from the owners to use certain roads or to enter certain areas. Clarion EZ Drive excludes these roads from the route calculation by default.
Ferries	Clarion EZ Drive includes ferries in a planned route by default. However, a map does not necessarily contain information about the accessibility of temporary ferries. You might also need to pay a fare on ferries.
Cross-border planning	In some cases the route calculated according to your other navigation and route preferences would lead through another country. If you wish to always stay within the same country, turn this option off.
Carpool lanes	This control appears only when navigating in the USA. You should check whether you are allowed to use carpool lanes before enabling this road type.

Route Calculation Method types:

Option	Description
Fast	Gives the quickest possible route if you can travel at or near the speed limit on all roads. Usually the best selection for fast and normal cars.
Short	Gives a route that has the smallest total distance of all possible routes between the route points. Usually practical for pedestrians, cyclists or slow vehicles.
Economical	Combines the benefits of Fast and Short: Clarion EZ Drive calculates as if it were calculating the Fast route, but it takes other roads to save gas.
Easy	Results in a route with fewer turns. With this option, you can make Clarion EZ Drive to take, for example, the highway instead of series of smaller roads or streets.

4.5.4 Regional settings

These settings allow you to adjust the application for your local language, measurement units, time and date and their formats, as well as choose the voice guidance profile you prefer. Tap the following

buttons:   .

Button	Description
Program Language	This button displays the current written language of Clarion EZ Drive. By tapping the button, you can select from a list of available languages. The application will restart if you change this setting; you are asked to confirm this.
Voice Profile	This button shows the current language of the voice guidance. By tapping the button, you can select from a list of available languages and speakers. Tap any of these to hear a sample voice prompt. Just tap OK when you have selected the new spoken language.
Units	You can set the distance units to be used by the program. Clarion EZ Drive may not support all the listed units in some voice guidance languages. If you select a measurement unit not supported by the chosen voice guidance language, a warning message will appear.
Set Date & Time Format	You can set the date and time format. Various international formats are available.
Time and Time Zone Settings	You can access time and time zone settings. Clarion EZ Drive helps you with correcting the device time to the ever accurate GPS time. Clarion EZ Drive can also help you set the time zone based on your current GPS position.

Time and Time Zone Settings:

Button	Description
--------	-------------

Button	Description
Auto Time Correction to GPS	Use this feature to synchronise the clock of your device to the very accurate time provided by the GPS receiver.
Use Auto Time Zone	Use this feature to synchronise the time zone of the clock of your device to the time zone based on your current GPS position. This is useful if you travel abroad.
Set Time Zone	Set time zone manually if you do not want to synchronise the time zone automatically. This allows you to use Auto Time Correction and apply a time zone offset to obtain the desired time.
Compare GPS and device times	The current time of the GPS receiver and the device clock are displayed. Please note that the GPS clock is only available with GPS reception. This allows you to check whether any correction is needed.

4.5.5 Navigation settings

You can control how Clarion EZ Drive behaves during navigation. Tap the following buttons:



Button	Description
Keep Position on Road	<p>This feature allows car drivers to always correct GPS position errors by matching the vehicle position to the road network. For pedestrian navigation, this feature is automatically disabled to let the software show your exact position.</p> <p>By turning off this feature you also turn off the GPS position error filtering. The position shown on the map will be subject to all position errors and position fluctuations.</p>
Off-route Recalculation	<p>This switch tells Clarion EZ Drive whether to automatically recalculate the route when you deviate from it. If this feature is turned off, you need to initiate route recalculation otherwise navigation will be stopped until you return to the originally recommended route.</p> <p>Setting another point than the current GPS position as the start point of the active route will automatically disable this feature.</p>
Restore Lock-to-Position	If you have accidentally moved the map during navigation, this feature can move the map back to your current GPS position after the given period of inactivity.
Automatic Overview	<p>This feature will switch the map view to Overview mode when the next route event is at a distance. Overview is a zoomed out 2D view to let you see the surrounding area. You have the following controls for Automatic Overview:</p> <ul style="list-style-type: none"> • Turn Distance for Overview: The map view will be switched to Overview mode if the next route even is at least as far as this value. • Default Zoom Level: Overview mode will appear with this zoom level. You can scale the map in Overview mode but next time Overview appears again, this zoom level will be applied.

4.5.6 Warning settings

 
You can enable some handy warnings, and disable the touch screen in a moving vehicle with Safety Mode. Tap the following buttons:



Button	Description
Warn When Speeding	Maps may contain information about the speed limits of the road segments. Clarion EZ Drive is able to warn you if you exceed the current limit. This information may not be available for your region, or may not be fully correct for all roads in the map. This setting lets you decide whether you wish to receive the warnings or not. You can set the relative speeding at which the application warns you (100% is the current speed limit): <ul style="list-style-type: none">• In Built-up Areas: in cities and towns• Elsewhere: at all other locations
Speed Camera Warning	This feature allows you to receive a warning when approaching a Road Safety Camera. You must ensure on your own liability that using this feature is legal in the country where you intend to use it. You have the following options: <ul style="list-style-type: none">• Audible Warning: beeps can be played while you are approaching the camera, or just alert sounds if you exceed the speed limit while approaching one of these cameras.• Visible Warning: the type of the camera and the controlled speed limit appears on the Map screen while you are approaching one of these cameras.
Warn if Too Fast for a Pedestrian	Enable this warning to be alert if pedestrian mode is activated and you drive fast. You are asked if you want to change to car navigation mode. This way you can be sure you will not be routed via one-way roads in the wrong direction as a pedestrian could, for example.
Safety Mode	Safety Mode will disable the touch screen while the vehicle is moving to keep your attention on the road. You cannot set a new destination or change settings.

4.5.7 GPS settings

You can set up the connection to the GPS receiver. Tap the following buttons:



Button	Description
GPS receiver ...	The first line of the screen informs you about the connection status of the GPS receiver. Connecting the GPS receiver is automatic in Clarion EZ Drive, so normally you will not need this screen of settings at all.
GPS Enabled	Turn the connection to the GPS receiver on or off. Turning off the GPS

Button	Description
	receiver can be useful for indoors use or demonstration purposes.
Port	The communication port used between the GPS receiver and the application.
Baud Rate	The communication speed used between the GPS receiver and the application.
Autodetect	Tap this button and let Clarion EZ Drive find and connect the GPS receiver.

4.5.8 TMC settings

You can set up the connection to the TMC receiver. If the TMC receiver is working, you can select the



radio station to be received. Tap the following buttons:



If there is no TMC receiver connected to Clarion EZ Drive, you have the following options:

Button	Description
No TMC Hardware Found!	The first line of the screen informs you about the connection status of the GPS receiver. Connecting the TMC receiver is automatic in Clarion EZ Drive, so normally you will not need this screen of settings at all.
Protocol	The communication protocol used between the TMC receiver and the application.
Port	The communication port used between the TMC receiver and the application.
Baud Rate	The communication speed used between the TMC receiver and the application.
Autodetect	Tap this button and let Clarion EZ Drive find and connect the TMC receiver.

The TMC Station Settings screen contains the following options:

 
 
Button	Description
Use Auto-tuner	If Auto-tuner is turned on, the tuner of Clarion EZ Drive sweeps through the FM CCIR radio band searching for a TMC signal. The first station with TMC data will be used automatically. When no TMC signal is available, the tuner keeps on searching. Turn off Auto-tuner to select a radio station manually.
 	When Auto-tuner is turned off, search for the desired radio station manually with these buttons.
Exclude This Station	Push this button to put the currently received FM radio station on an exception list, and make Clarion EZ Drive search for another station instead.
Show Excluded Stations	This button opens the list of radio stations previously excluded. You can re-enable any or all of the excluded stations.

With a TMC receiver already connected, the content of the screen is different:

Recalculate to Avoid Traffic	<p>This setting determines how Clarion Mobile Map uses the received TMC information in route recalculation:</p> <ul style="list-style-type: none"> • Automatic: When route recalculation becomes necessary based on the received TMC events, Clarion Mobile Map recalculates the route automatically. • Manual: When route recalculation becomes necessary based on the received TMC events, Clarion Mobile Map notifies you, but you can decide whether to recalculate the route or not. • Disabled: TMC events are only taken account when the route is recalculated in an off-route situation.
Sort Events by	<p>Sort the list of TMC events in the following ways:</p> <ul style="list-style-type: none"> • Distance: The list is ordered by the distance of the TMC event in a straight line from your current GPS position. • Road Name: The list is ordered by the name of the road concerned by the TMC event. • Type: The list is ordered by the type of the TMC event.
Event List	<p>The content of the TMC event list can be filtered:</p> <p>All Events: All TMC events received by Clarion Mobile Map appear in the list.</p> <p>On Route: Only TMC events concerning a part of your active route appear in the list.</p>
Stations	Tap this button to open a new screen with settings of the TMC radio station.

4.5.9 Menu settings

You can modify the look and behaviour of the Menu screens. Tap the following buttons:



Button	Description
Animation	You can activate and deactivate the Menu animations. When animation is turned on, buttons on Menu and keyboard screens appear in an animated way.
Background	You can choose the image to be used as the menu background image.
Skin	You can choose from a list of available skins to change the look of Clarion EZ Drive.

4.5.10 Device settings

You can change some device settings to control the screen backlight when Clarion EZ Drive is running. Tap the following buttons:



Button	Description
Power Management	You can set how the backlight will behave when the screen has not been touched for a while. You have the following options: <ul style="list-style-type: none">• Backlight Always On: The screen is continuously lit.• Smart: When running on battery, Smart Powersave will light up the screen only when you tap the screen, or if there is something to show you. After a few seconds the light level decreases, and after another few seconds the backlight turns off. This helps achieve a longer battery life.
Backlight Intensity at Daytime	You can set the backlight level for the color scheme used during the day.
Backlight Intensity at Night	You can set the backlight level for the color scheme used during the night.

4.5.11 Track Log settings

You can set up an automatic Track Log saving, and fine-tune its settings. Tap the following buttons:



Button	Description
Update Interval	This is how often track points will be saved. Position information is normally received once a second from the GPS. If you do not need such a detailed log, you can increase this number to save track log space.
Enable Auto-saving	When auto-saving is enabled, you do not need to turn track log saving on and off manually. Clarion EZ Drive will automatically start recording the track log as soon as GPS position is available.
Track Log Database Size	This figure shows how much memory is used by the automatically saved track logs.
Track Logs Max. Size	You can set the maximum database size for the automatically saved track logs. When the limit is reached, the oldest automatically saved track logs will be deleted.
Create NMEA/SIRF Log	Independently of the normal track log, you can instruct Clarion EZ Drive to record the native GPS data received from the GPS device. These logs are saved as separate text files on an inserted memory card, and they cannot be shown or replayed in Clarion EZ Drive.

5 Glossary

2D/3D GPS reception

The GPS receiver uses satellite signals to calculate its (your) position and need at least four signals to give a three-dimensional position, including elevation. Because the satellites are moving and because objects can block the signals, your GPS device might not receive four signals. If three satellites are available, the receiver can calculate the GPS position but the accuracy is lower and the GPS device does not give you elevation data: only 2D reception is possible.

Active route

The instructions used in the ongoing navigation. You can save and load routes in Clarion EZ Drive, but only one route can be active at any given time, and it is always active until you delete it, reach your destination or you exit Clarion EZ Drive.

City Center

The City Center is not the geometric center of the city but an arbitrary point the map creators have chosen. In towns and villages, it is usually the most important intersection; in larger cities, it is an important intersection.

GPS accuracy

Several factors have an impact on the deviation between your real position and the one given by the GPS device. For example, signal delay in the ionosphere or reflecting objects near the GPS device have a different and varying impact on how accurately the GPS device can calculate your position.

Route

A series of destinations to be reached one after the other. A simple route contains one start point and only one destination. Multi-point routes can contain one or more via points (intermediate destinations). The last route point is the final destination and the route is cut into different legs (from one destination to the next).

Scheme

Clarion EZ Drive comes with different color schemes for the map for daytime or night use. Schemes are custom graphic settings for the map and they can have different colors for streets, blocks or surface waters in 2D and 3D modes, and they display shades or shadows in different ways in 3D mode.

One daytime scheme and one night scheme is always selected. Clarion EZ Drive uses them when it switches from day to night and back.

Road Safety Camera

A special POI type for speed cameras and red light cameras. Different data sources are available, and you can also mark the position of a Road Safety Camera on the map.

You can configure Clarion EZ Drive to warn you when you approach one of these cameras.

6 End User Licence Agreement

1. The contracting parties

1.1. Contracting parties to present Agreement are, on the one hand:

Nav N Go Kft (23 Bérc utca, H-1016 Budapest, Hungary; Hungarian reg.no.: 03-09-111944) as Licensor

and

the legal user (as defined in Section 2) of the object of present Agreement according to Section 4, hereinafter referred to as User on the other hand (hereinafter jointly referred to as Parties).

2. Conclusion of the Agreement

2.1. The Parties hereby acknowledge that present Agreement shall be concluded by implicit conduct of the Parties, without a signature of the Parties.

2.2. The User hereby acknowledges that following the lawful acquisition of the software product constituting the object of present Agreement (Section 4), any degree of use, installation to a computer or other hardware, installation of such hardware into a vehicle, pressing of the „Accept” button displayed by the software during installation or use (hereinafter referred to as actions of use) shall be deemed as implicit conduct resulting in the conclusion of the Agreement between the User and the Licensor.

2.3. Present Agreement shall by no means entitle persons who unlawfully acquire, use, install on a computer, install in a vehicle or utilize in any manner whatsoever the software product.

2.4. The end user licence agreement between the Parties shall be concluded with terms set forth in present Agreement.

2.5. The time of conclusion of present Agreement is the time of executing the first action of use (commencement of use).

3. Applicable law

3.1. In issues not regulated by present Agreement the jurisdiction of the Republic of Hungary shall be applicable, with specific reference to the Act No. 4 of 1959 on the Civil Code (CC) and to Act No 76 of 1999 on Copyrights (CA).

3.2. Present agreement is issued in English and in Hungarian. In case of dispute the Hungarian text shall prevail.

4. The object of the Agreement

4.1. The object of present Agreement shall be the navigation guidance software product of Licensor (hereinafter referred to as software product).

4.2. The software product shall include the operating computer program, its complete documentation, and the map database belonging thereto.

4.3. Any form of display, storage, coding, including printed, electronic or graphic display, storage, source or object code of the software product, or any other as yet indefinable form of display, storage, or coding, or any medium thereof shall be deemed as part of the software product.

4.4. Error corrections, additions, updates used by the User as defined in Section 2 following the conclusion of present contract shall also be deemed as part of the software product.

5. Owner of copyrights

5.1. The Licensor - unless contractual or legal regulations state otherwise - is the exclusive owner of all material copyrights vested in the software product.

5.2. Copyrights extend to the whole software product and its parts separately as well.

5.3. The owner(s) of the copyrights of the map database forming part of the software product is (are) natural person(s) or corporate entity(es) as listed in the appendix to present Agreement or in the „About/Map” menu item of the operating computer program (hereinafter referred to as Database Owner). Licensor hereby states that Licensor has obtained sufficient usage and representation rights from the Database Owner in order to utilize and give into further utilisation the map database as set forth in present Agreement.

5.4. In conclusion and execution of present Agreement the Database Owner is represented by Licensor in relations to the User.

5.5. By concluding present Agreement, Licensor shall withhold all rights vested in the software product, except for those that the User is entitled to according to explicit legal regulations or that of present Agreement.

6. Rights of the User

6.1. The User is entitled to install the software product on one hardware device (desktop, handheld, portable computer, navigation device) at a time, and to run and use one copy thereof.

6.2. The User is entitled to make one security copy of the software product. However, if the software product is operational after installation without the use of the original media copy, then the original media copy is deemed to be a security copy. In all other cases, the User is only entitled to use the security copy if the original media copy of the software product has become unsuitable for proper and legal use without any doubt, such state thereof being supported by acceptable proof.

7. Limitations of use

7.1. The User is not entitled

7.1.1. to multiply the software product (to make a copy thereof);

7.1.2. to lease, rent, lend, distribute, transfer it to a third person with or without a consideration;

7.1.3. to translate the software product (including translation (compilation) to other programming languages);

7.1.4. to decompile the software product;

7.1.5. to modify, extend, transform the software product (in whole or in part), to separate it into parts, compose it with other products, install it in other products, utilize it in other products, not even with the aim of achieving a co-operation with other products;

7.1.6. apart from using the computer program, to obtain information from the map database included in the software product, to decompile the map database, to use, copy, modify, extend, transform the map database in whole or in part or the group of data stored therein, or to install it in other products, utilize it in other products, not even with the aim of achieving a co-operation with other products;

8. Non-warranty, limitation of responsibility

8.1. Licensor hereby informs the User that although the greatest care was taken in producing the software product, yet with respect to the essence of the software product and the technical limitations, the Licensor does not warrant for the software product being completely error free, and the Licensor is not bound by any contractual obligation by which the software product obtained by the User should be completely error free.

8.2. The Licensor does not warrant that the software product is suitable for any purpose defined either by the Licensor or the User, and does not warrant that the software product is capable of co-operating with any other system, device or product (e.g. software or hardware).

8.3. The Licensor does not assume any responsibility for damages incurred due to an error in the software product (including errors of the computer program, the documentation and the map database).

8.4. The Licensor does not assume any responsibility for damages incurred due to the software product not being applicable for any defined purpose, or the error or lack of co-operation thereof with any other system, device or product (e.g. software or hardware).

8.5. The Licensor shall hereby also draw the attention of the User with great emphasis to the fact that while utilising the software product in any form of transportation, observing the traffic regulations and rules (e.g. use of obligatory and/or reasonable and suitable security measures, proper and generally expected care and attention in the given situation, and special care and attention required due to utilising the software product) is the exclusive responsibility of the User; the Licensor shall not assume any responsibility for any damages occurred in relation to utilising the software product during transportation.

8.6. By concluding present Agreement the User shall especially acknowledge the information stated in Section 8 above.

9. Sanctions

9.1. The Licensor hereby informs the User that according to regulations of the CA, should the Licensor find its rights to be breached, the Licensor may

9.1.1. claim the acknowledgement of such breach by court;

9.1.2. claim ceasing the breach and ordering the person under breach from continuing such;

9.1.3. claim that the person under breach give proper compensation (even by way of publicity, to the expense of the person under breach);

9.1.4. claim the return of the increase of assets due to the breach;

9.1.5. claim ceasing the breaching situation, the restitution of the state before the breach, to the expense of the person in breach, and may claim the destruction of instruments and materials used for the breach, and that of the objects created by the breach;

9.1.6. claim damages.

9.2. The Licensor hereby also informs the User that the breach of copyrights and related rights is a crime according to Act IV of 1978 on the Criminal Code, which may draw as a sanction a sentence of two years in prison in basic cases and up to eight years in prison in qualified cases.

9.3. For disputes arising from present Agreement the parties hereby agree on the exclusive competence of - depending on value and title disputed - either the Central Court of Budapest Districts (Pesti Központi Kerületi Bíróság) or the Municipal Court of Budapest (Fővárosi Bíróság).